


black red white gray

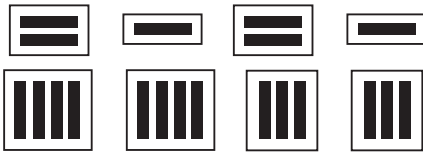

U S A



U	SA-207		U
N	SA-207		N
I	SA-207		I
T	SA-207		T
E			E
D			D

SA-207

KDS 1998

S	U	S
T	U	T
A	S	A
T	S	T
E	A	E
S	A	S

SA-207







SA-207




0.045" wide strips









0.05" wide strips

0.05" wide strips



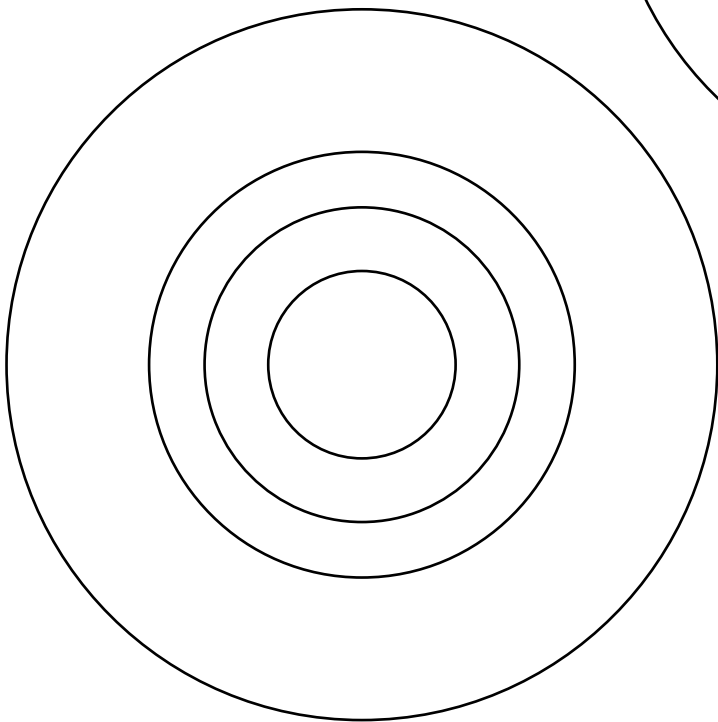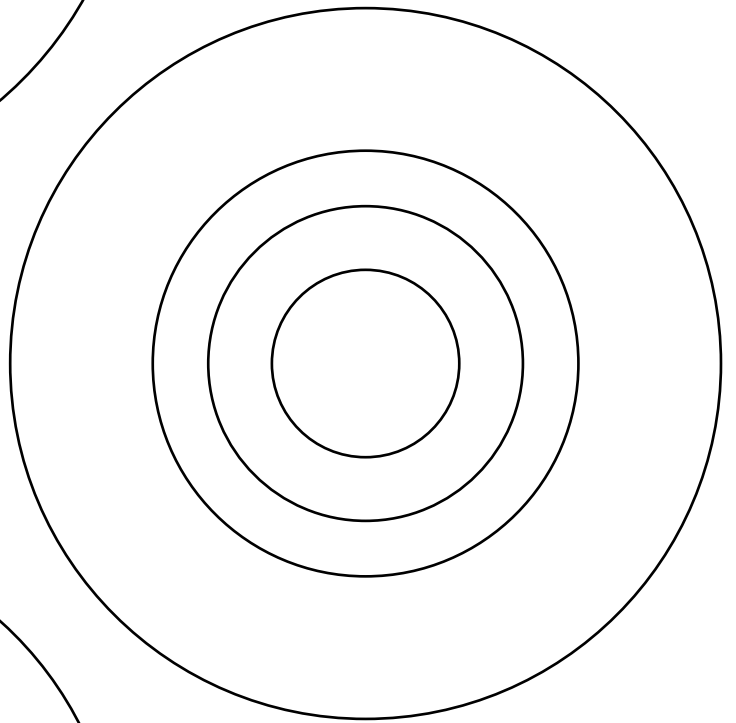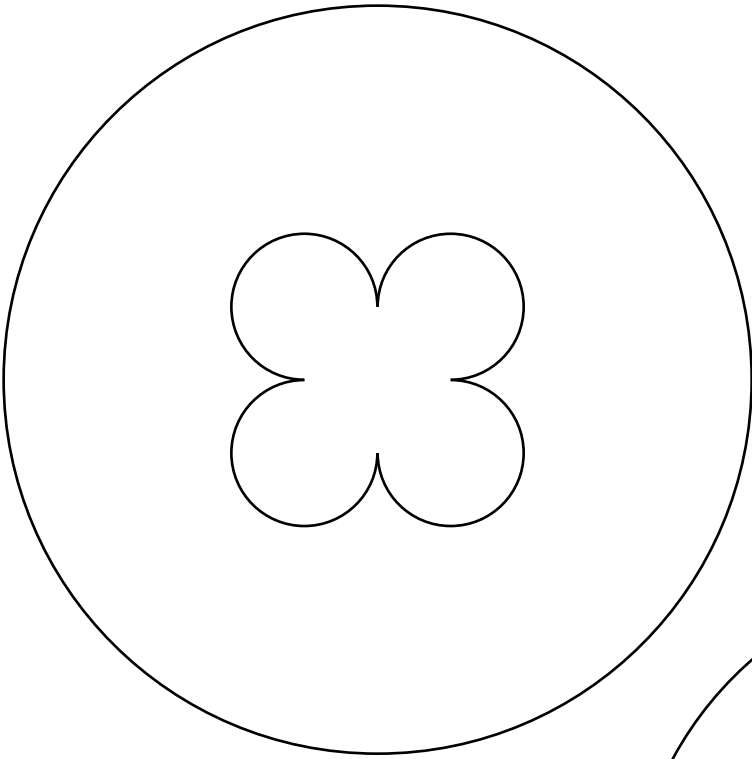

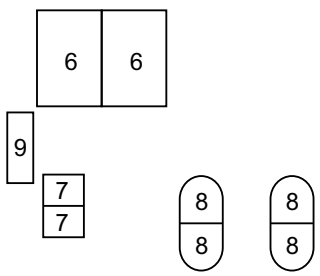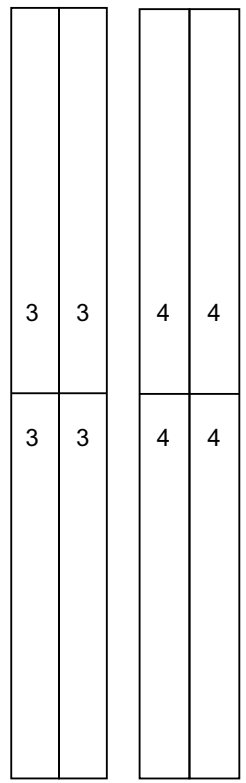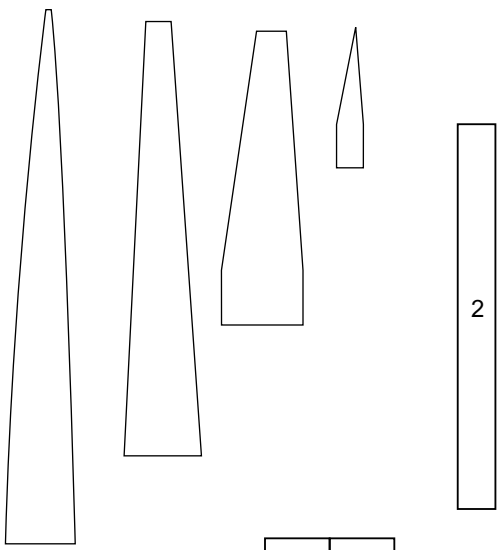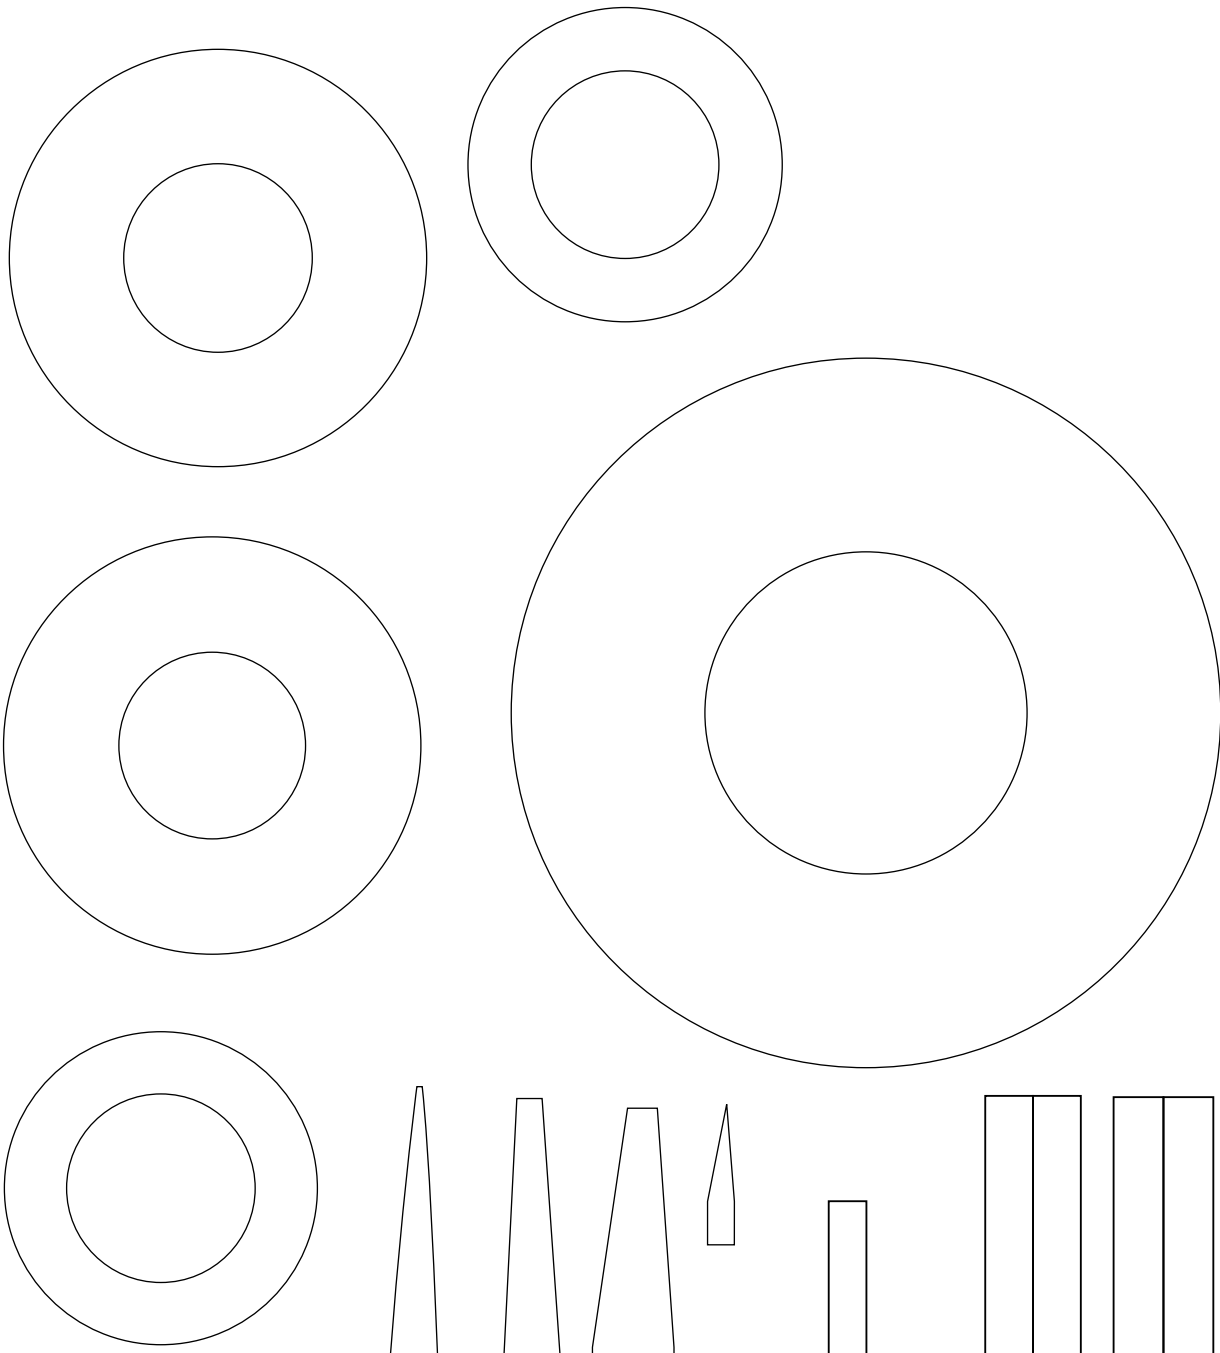

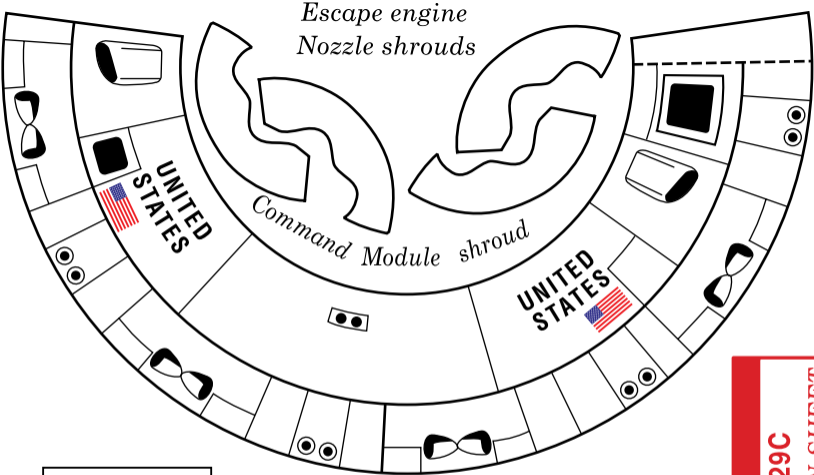

Escape engine  
Nozzle shrouds

Command Module shroud

UNITED STATES

UNITED STATES

• LOWER  
"V" STRUT  
ASSEMBLY  
PIECE •

Push the point of a sharp pencil through each of the dots to make a 1/32" hole

• UPPER  
"V" STRUT  
ASSEMBLY  
PIECE •

68E27A

SP-29C

PATTERN SHEET